




# Kodak EasyShare C713 Outer Case Replacement

Replace the Outer Case in your Kodak EasyShare C713.

Written By: Taggart Ashby

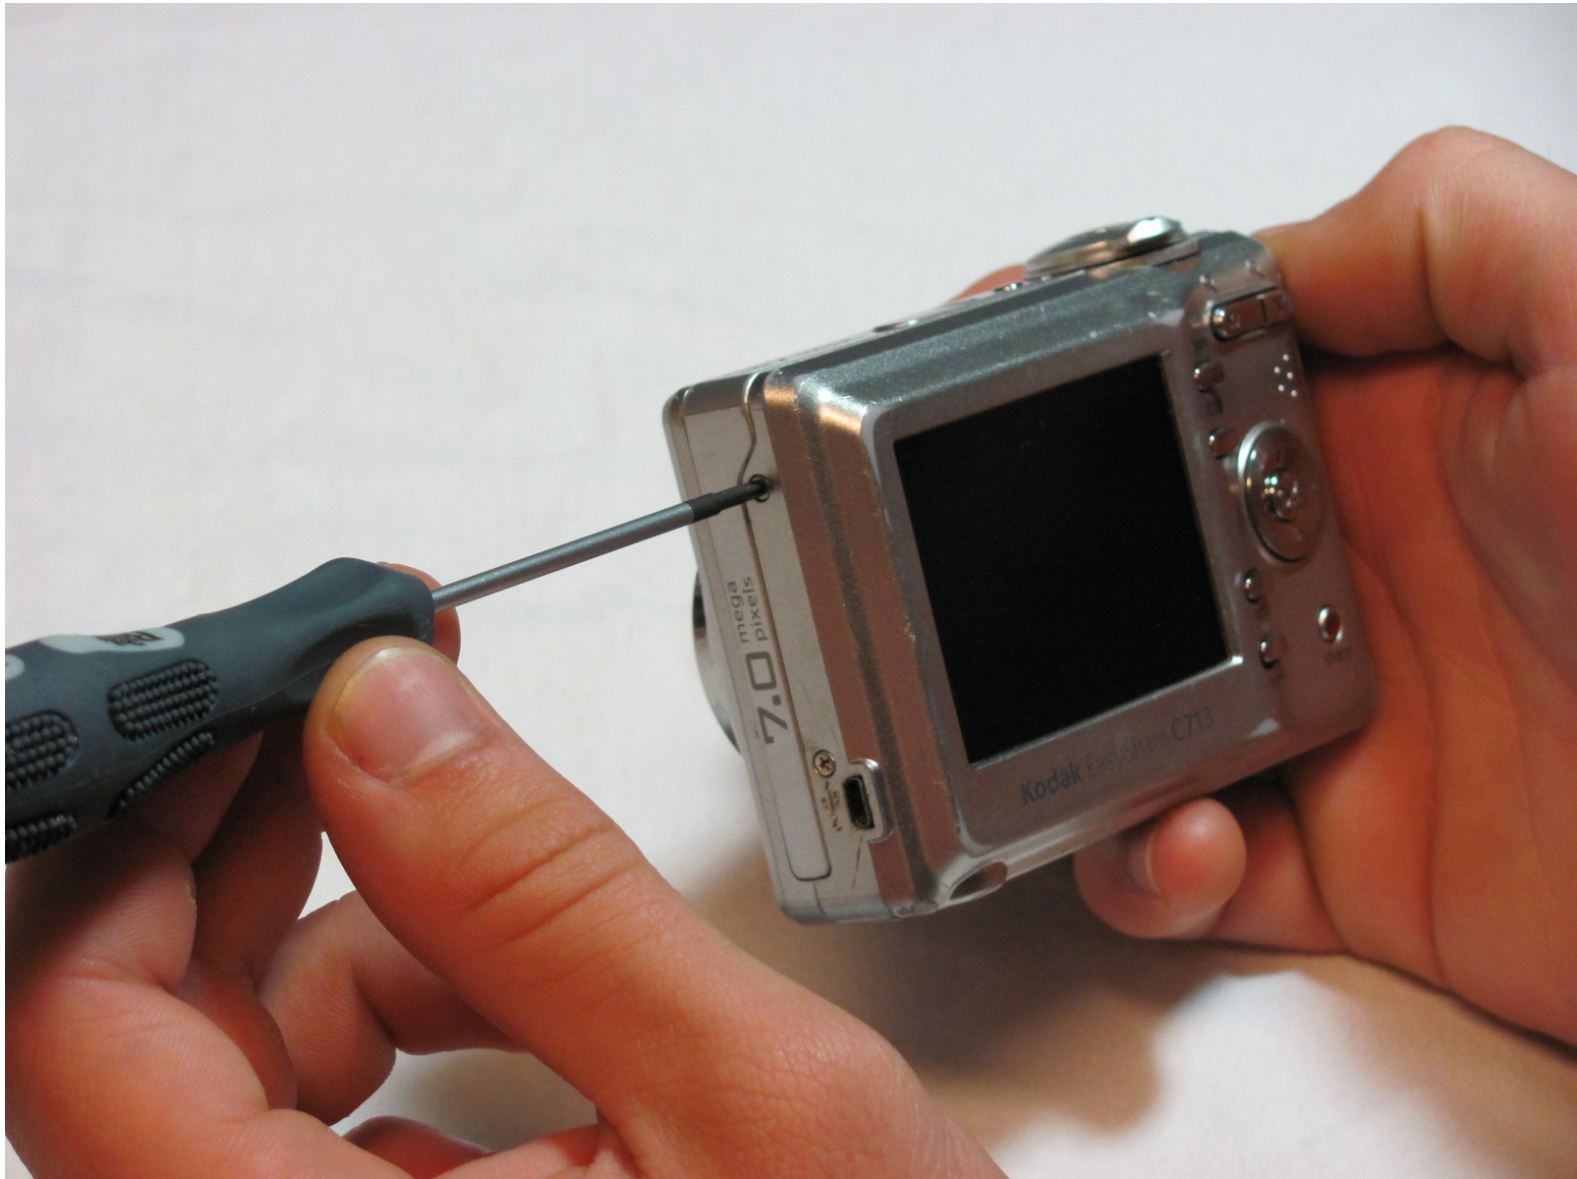

## INTRODUCTION

Use this guide to remove and replace front and back casing.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Batteries



- Use your finger tip to slide battery cover door away from the center of the camera.
- The battery door should spring open.
  - If this does not happen, gently open the door lifting from the outer bottom side of the camera.

## Step 2



- Remove the old batteries.






## Step 3 — Outer Case



- Remove 7 screws from the outer case with a Phillips #00.
- All screws are 4.45mm.
- There are 2 screws on the port side.
- There are 2 screws on starboard side.
- There are 3 screws on the bottom.

## Step 4

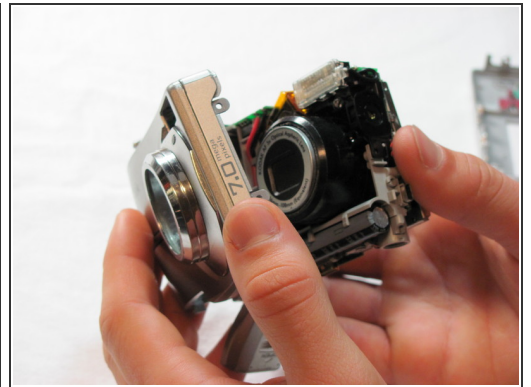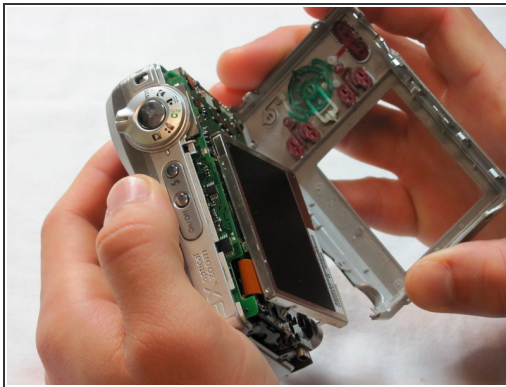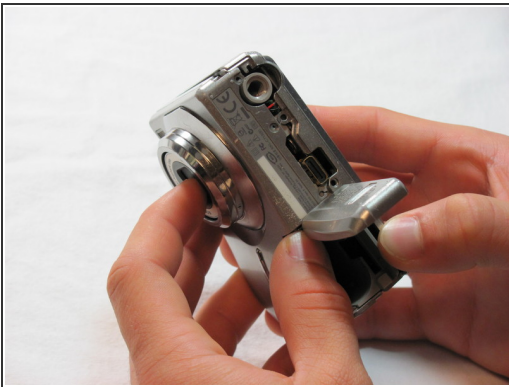

⚠ Make sure the battery cap is "up".

- Pull the outer case off with your hands.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 10:46:06 AM.